


TAPEPRO DRYWALL TOOLS

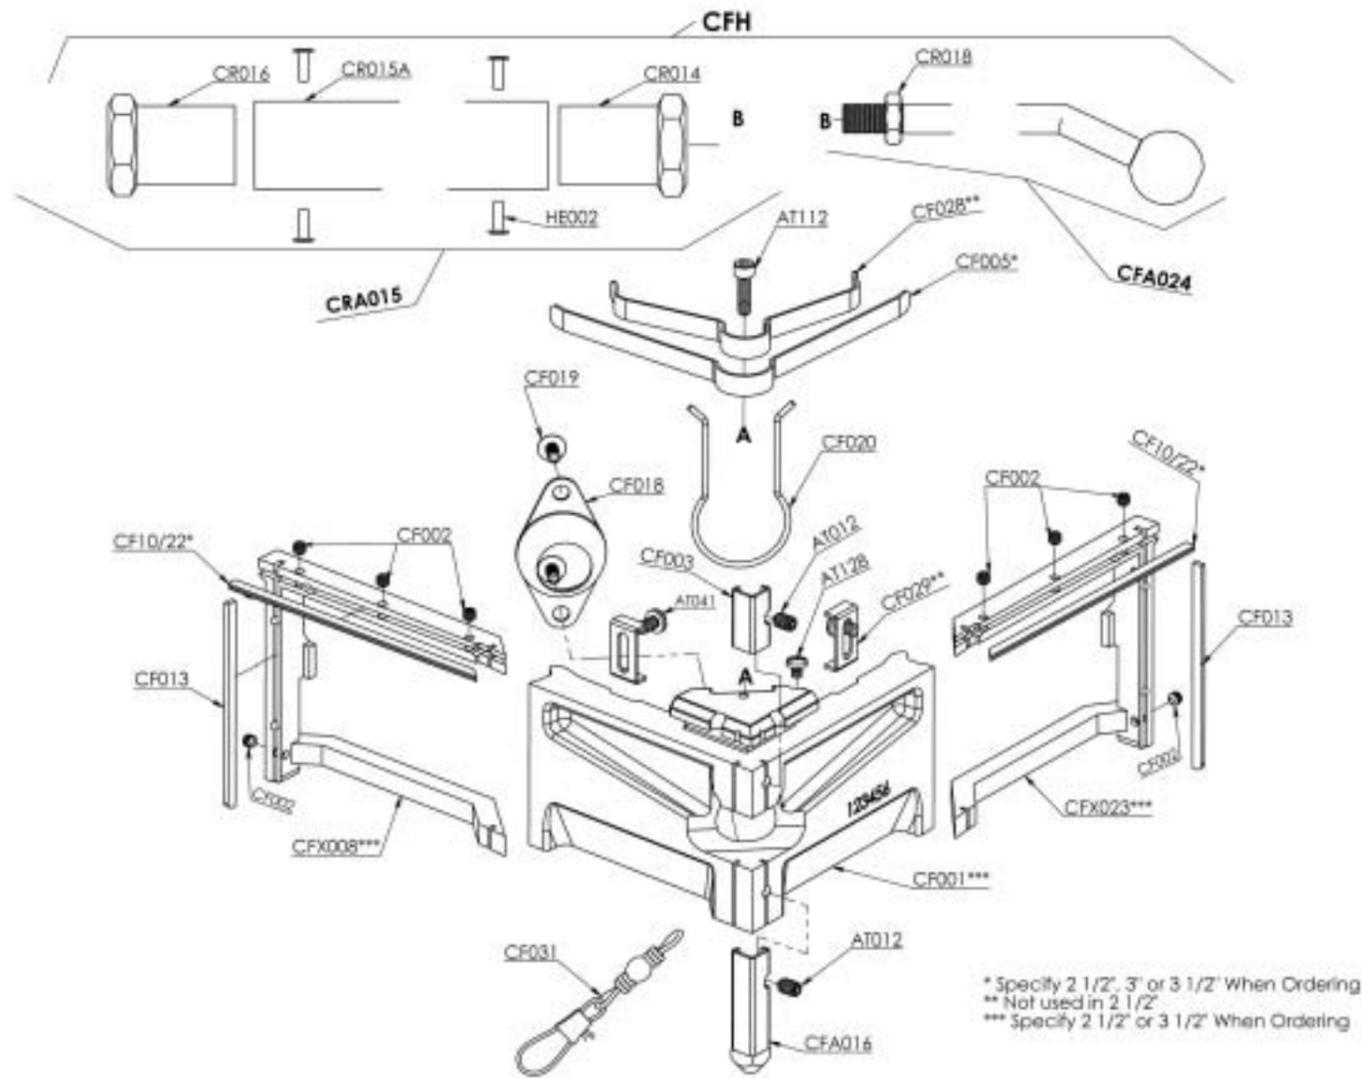

TAPEPRO
DRYWALL TOOLS

TAPEPRO CORNER FINISHER

For further information contact: WALLBOARD TOOL COMPANY PTY LTD: PO BOX 2508 Burleigh MDC QLD 4220 Australia.
 Telephone: 1300 653 177 Facsimile: 1300 657 442 Email: sales@wallboardtools.com.au Website: www.wallboardtools.com.au

TAPEPRO CORNER FINISHER



The Tapepro Corner Finisher is designed to fill both sides of the internal angle at once whilst feathering the edges of joint compound into the angle. The Tapepro Corner Finishers are available in two different sizes to perform the first and second coat. The smaller Tapepro Corner Finisher is designed to be used after the Tapepro Corner Roller to wipe away excess compound and feather both edges of the angle simultaneously. The wider Tapepro Corner Finisher is designed to be used in conjunction with the Tapepro Corner Box to apply a final coat of compound.

The Tapepro Corner Finisher includes:

- > 65mm Tapepro Corner Finisher (first coat)
- > 75mm Tapepro Corner Finisher (final coat)

BEFORE USE

- > Ensure that the Tapepro Corner Finisher is free from any dry joint compound.
- > Check that the Corner Finisher frame moves freely and there is no build up of dry compound behind the frames.

USING THE TAPEPRO CORNER FINISHER

1. Snap the 65mm Tapepro Corner Finisher onto the Tapepro Corner Finisher Handle and attach the swivel chain to reduce the risk of damage. (CF-1)
2. Stand directly in front of the internal.
3. Place the Tapepro Corner Finisher into the internal about 25mm above the floor. Whilst applying pressure run the Tapepro Corner Finisher up the internal approximately 600mm. Remove the Tapepro Corner Finisher from the wall in an upward sweeping motion.

Tip: It is important that the paper tape has been rolled tightly into the internal. If this has not been done the Corner Finisher blades will tear the paper tape out of the internal.

4. Turn the Tapepro Corner Finisher around and place at the top of the internal. Again, whilst applying pressure run down the internal. The internal should be smooth and all edges of joint compound feathered. (CF-2 & CF-3)
5. To apply the final coat, attach the wider Tapepro Corner Finisher to the Tapepro Corner Box and lock the swivel chain. (CF-4)



6. Stand directly in front of the internal. It is important to maintain the Tapepro Corner Box nose cone at right angles to the direction of travel and bisect the internal. (CF-5)
7. Begin with the vertical angles by placing the Tapepro Corner Finisher at the top of the internal. Whilst applying pressure pull the Tapepro Corner Box down the wall to approximately 600mm from the bottom of the joint. (CF-6)
8. Turn the Tapepro Corner Box around and starting from the bottom of the joint run up the internal. It is important that the Tapepro Corner Box nose cone is at a right angle to the direction of travel. (CF-7)

Tip: It may be necessary to try variations of joint compound consistency to achieve the perfect finish.

Note: The Tapepro Corner Box and Tapepro Corner Finisher does not apply a large amount of joint compound to the angle. The Tapepro Corner Finisher blades are set to distribute enough compound to cover the tape and feather the edges. When using the Tapepro Corner Finisher the paper tape will be visible when the compound is wet. When the compound has dried the angle will have an even finish that requires minimal sanding.

CLEANING

Your Tapepro Corner Finisher should be cleaned after every use to maximise lifespan and maintain optimal performance.

1. Clean the outside of the Tapepro Corner finisher with a hose and stiff brush.
2. Ensure the areas behind the Tapepro Corner Finisher blades are free from compound by spraying water between the frames and Tapepro Corner Finisher body.

MAINTENANCE

All replacement parts are available from your local plasterboard distributor or Wallboard Tool Company. For your nearest distributor please call Wallboard Tool Company on 1300 653 177 or visit our website at www.wallboardtools.com.au

WARRANTY

All manufacturing faults are covered under the warranty. All non wear parts are covered under a 3 year warranty.

